

## Service Information

### Parking Lock

The parking lock Bowden cable does not need to be adjusted.

#### ■ Parking Lock Emergency Release

To manually release the electrical parking lock:

- Removed the shifter boot is to gain access to the release mechanism.
- Using the screw driver from the vehicle tool kit or (similar tool), unclip the release mechanism cover.
- Insert the screw driver/tool in the release mechanism to the left of the shifter.
- Move the release toward the rear of the vehicle and observe the shifter indicator light illuminate the "N" position.



**CAUTION!!!**

The vehicle will roll with the emergency parking lock released.

The emergency release is described in detail in the vehicle's Owner's Manual and in the Repair Instructions.

**Note: Releasing the parking lock using the emergency release can cause a fault code entry in the M DCT electronics.**

### Car Wash

At the car wash, before stopping the engine, you must actively switch to "N". Vehicles with "Comfort Access" must leave the transmitter in the vehicle or in the ignition lock.

### Transmission Oil

#### ■ M DCT Oil Type

"BMW DCT Oil-1" is a long-term oil that was especially designed for the M DCT transmission.

#### ■ Oil Change Interval

The M DCT Drivelogic transmission has a new long-term rated oil, DCT Oil-1, which requires no replacement unless specified for a repair. (See SI B 00 01 07)

### Transmission Oil Cooling

In the event that the transmission oil temperature increases above the allowable limit, the engine torque is reduced and the maximum rpm is limited as a safety measure.

**CAUTION!!!**

**Because system oil pressure cannot be built up when the engine is not running, push starting a M DCT vehicle is not recommended.**