 





Q50 Hybrid








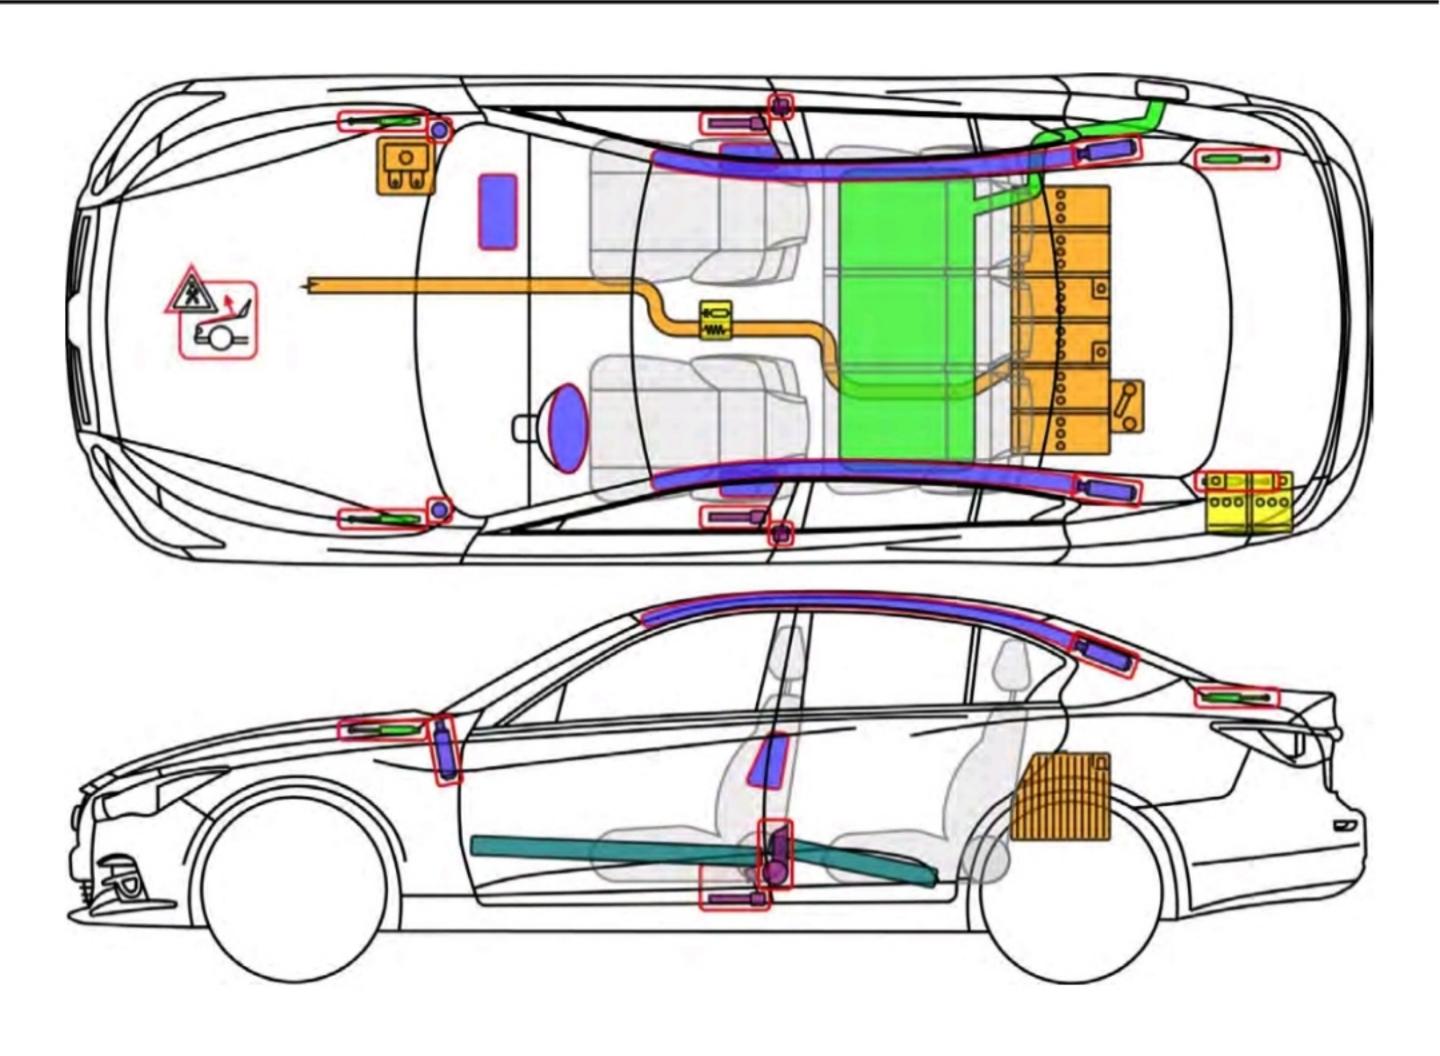




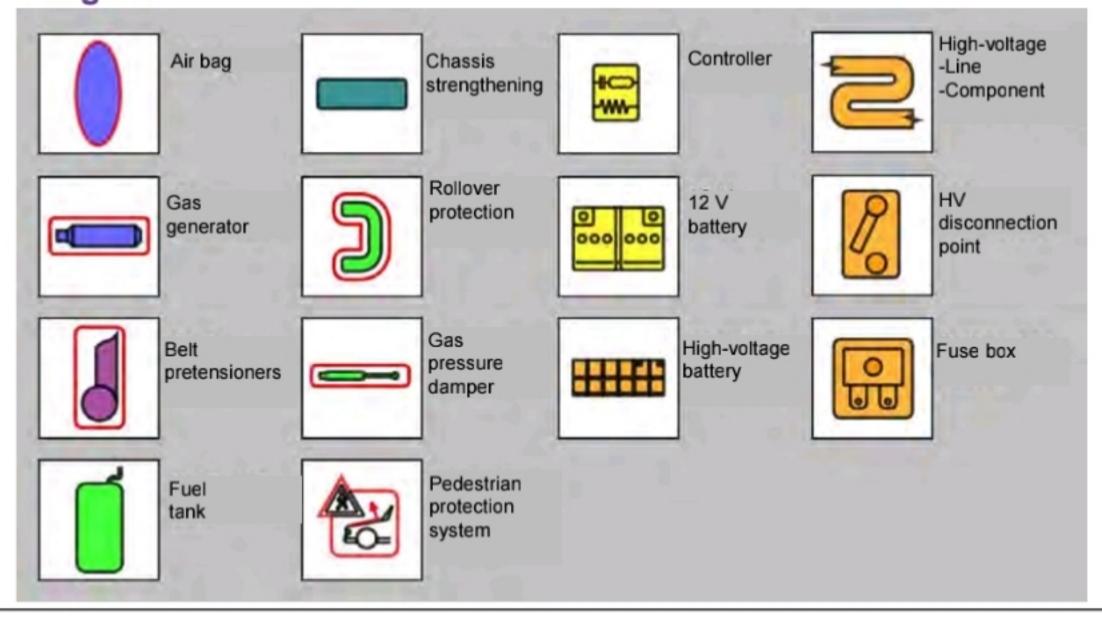

06/2017 |

INFINITI EUROPE in cooperation with Moditech Rescue Solutions



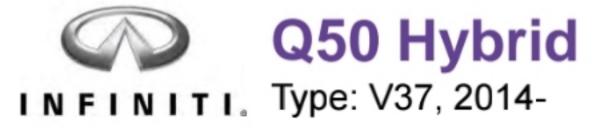







#### **General** info

- In the event of an accident with an airbag and/or belt tensioner activation, the vehicle drive is automatically deactivated. The supplemental restraint systems remain active.
- The amount of time until the drive is completely deactivated is
  10 minutes after the deactivation steps have been carried out.
- Protective equipment required (insulating gloves up to 1000 V, face protection).

### Secure vehicle against rolling away

- Position wedges under the wheels.
- Activate handbrake.


### Disable high-voltage (HV) and supplemental restraint system (SRS)

#### Method 1

- Check whether the high voltage system is switched on. Symbol:
- If the system is active, press the Start/Stop button once.
- Disconnect the 12 Volt battery. Ground cable first.






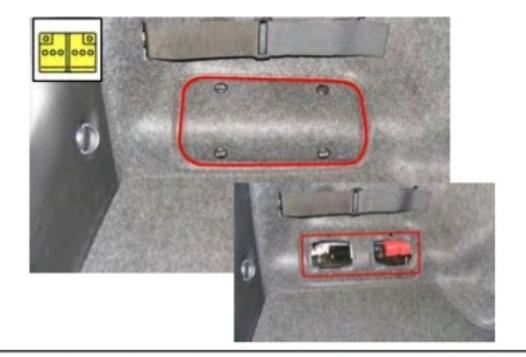

06/2017 |

INFINITI EUROPE in cooperation with Moditech Rescue Solutions



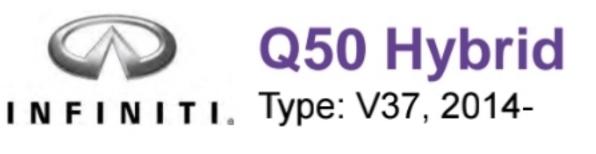





Disable high-voltage (HV) and supplemental restraint system (SRS)

### Method 2

1. Locate and open the fuse box.



2. Remove the fuses shown in the box cover.

 



Disconnect the 12 Volt battery. Ground cable first.









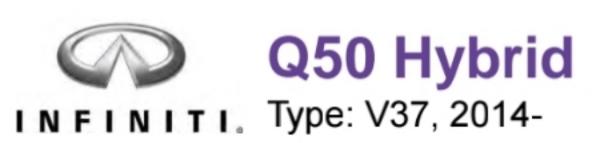








06/2017 |

INFINITI EUROPE in cooperation with Moditech Rescue Solutions



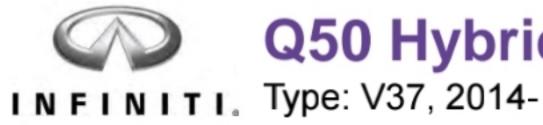

Q50 Hybrid






### Disable high-voltage (HV) and supplemental restraint system (SRS)

#### Method 3


- Locate HV disconnection point.
- 2. Remove service plug





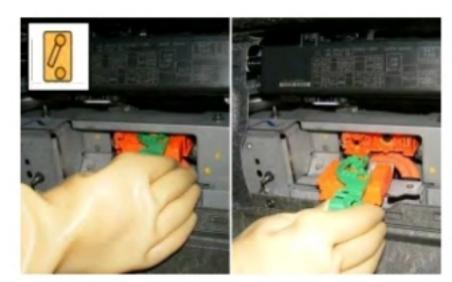

3. Disconnect the 12 Volt battery. Ground cable first.

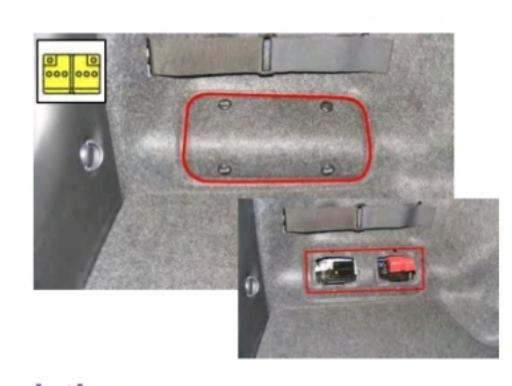

If the 12 Volt battery can not be disconnected, the supplemental restraint systems continue to be active!

