








Mitsubishi i-MiEV

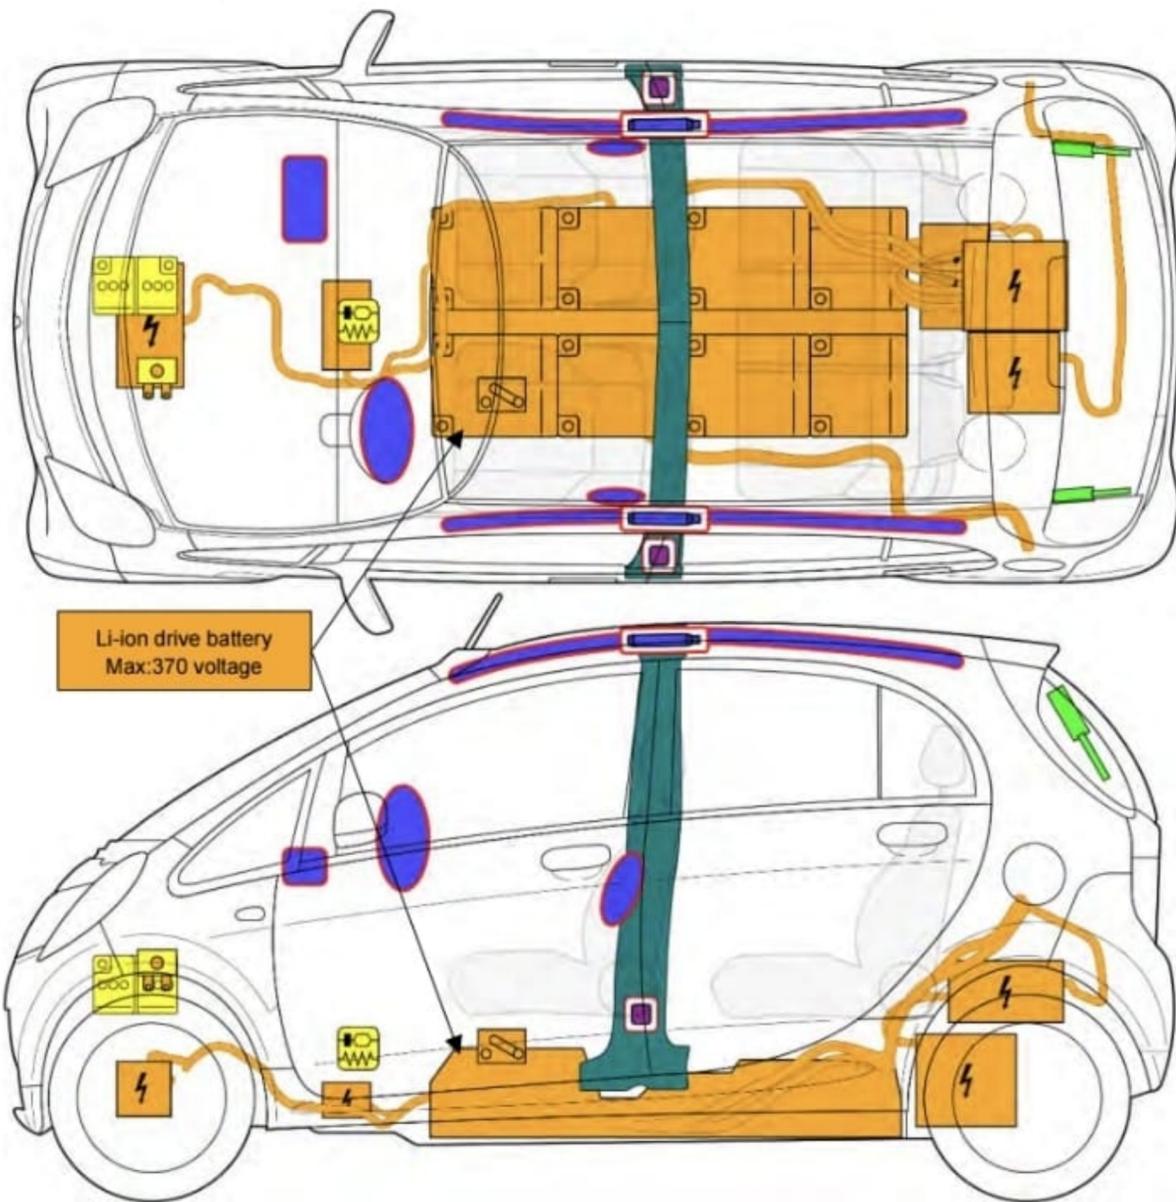

 MITSUBISHI MOTORS	i-MiEV Body type: Station wagon Type: HA3W, HA4V, HA4W Model year: 2016 – 2020		
---------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------



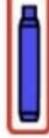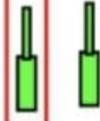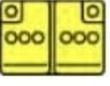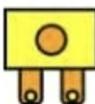	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable / component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage
				ID No. HAW-ENRS-EN02	Version No. 02	Version Date. 8/2020	Page 1/4		



Mitsubishi i-MiEV



 MITSUBISHI MOTORS	i-MiEV Body type: Station wagon Type: HA3W, HA4V, HA4W Model year: 2016 – 2020		
	1. Identification / recognition		


1. Identification / recognition

Features on vehicle exterior




2. Immobilisation / stabilization / lifting

How to determine if vehicle is ON / OFF

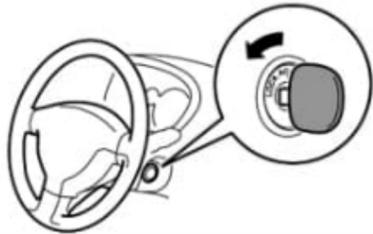

Support positions for Jack and Lift

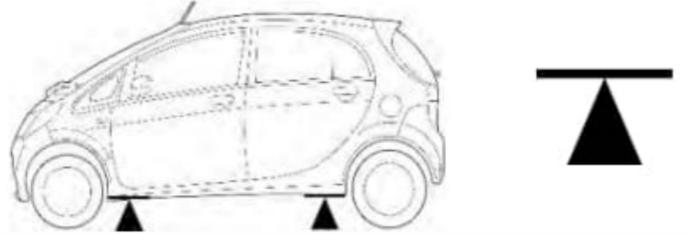


3. Disable direct hazards / safety regulations

1. How to disconnect the 12V auxiliary battery negative terminal


Wait 1 minutes after turning off the key.

 1m

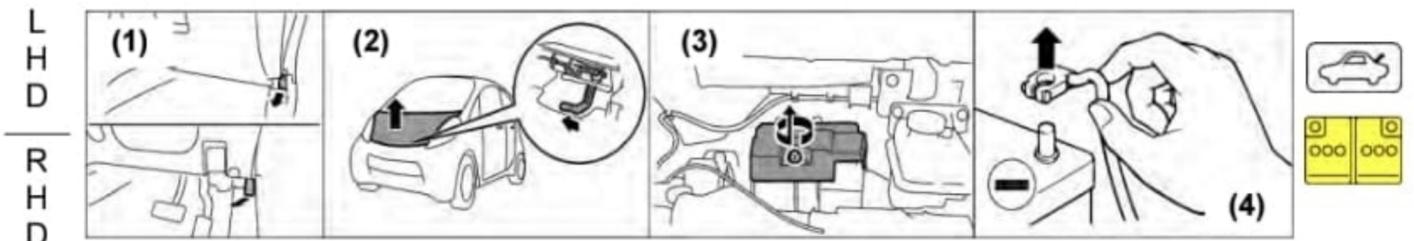

2. How to disconnect the "Power unit control" fuse

If you cannot locate this fuse, remove all fuses and relays in the fuse box.

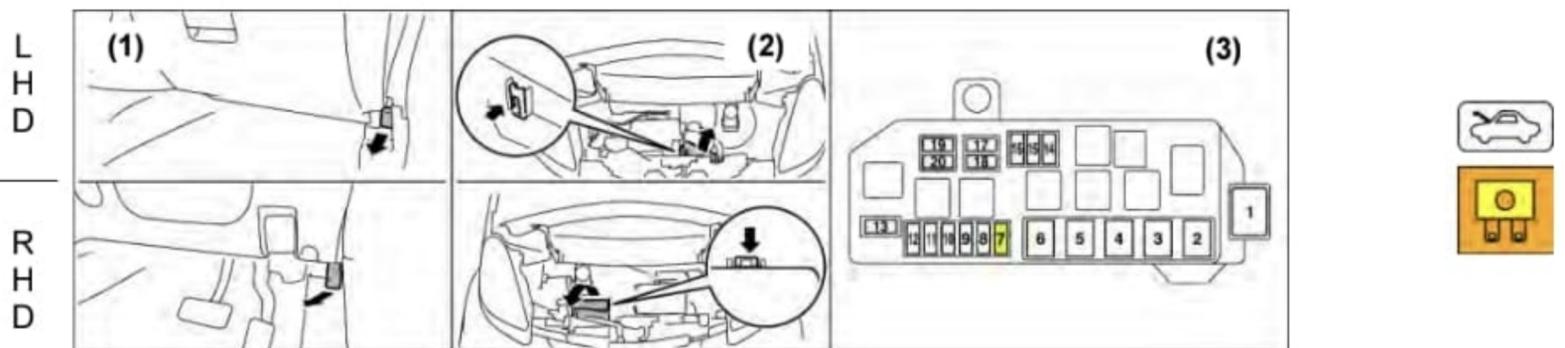

3. Use insulating Personal Protective Equipment (PPE) (Rubber insulating gloves, Rubber soled insulating)




4. How to shut down High voltage (pull out the service plug)

Next page

Wait 5 minutes after disconnecting the 12V auxiliary battery negative terminal

 5m

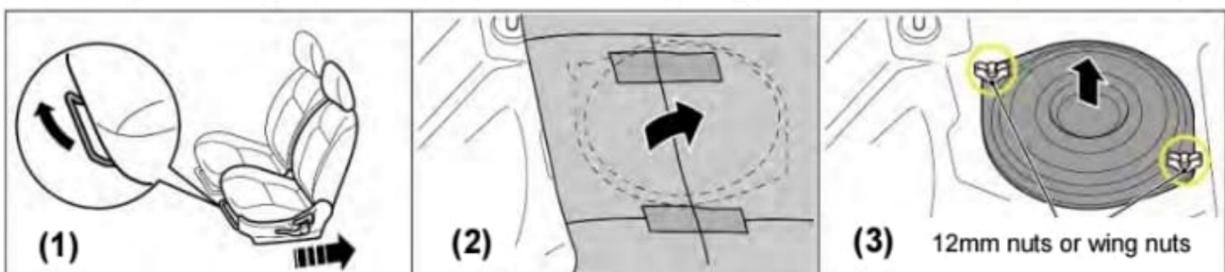


	ID No. HAW-ENRS-EN02	Version No. 02	Version Date. 8/2020	Page 2/4
--	-------------------------	-------------------	-------------------------	-------------



Mitsubishi i-MiEV



	i-MiEV		
	Body type: Station wagon Type: HA3W, HA4V, HA4W Model year: 2016 – 2020		

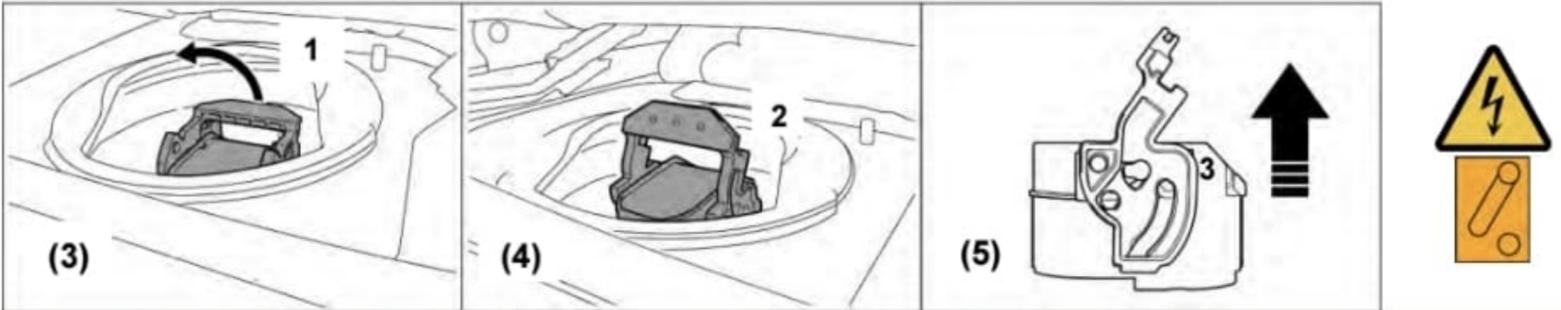

4. Access to the occupants

Vehicle CUT Zones

High-tensile and Ultra-high-tensile steel panels location

	CUT ZONE		High-tensile and Ultra-high-tensile steel panels
	Risk of high voltage shock and airbag deployment		

5. Stored energy / liquids / gases / solids

Fluids / gases used in this vehicle

	Unit name	Capacity & Type	Designation	Colour
	Li-ion drive battery	16 kWh	Electrolyte	Clear & colourless
	12V auxiliary battery	27 Ah	Electrolyte	Clear & colourless



6. In case of fire

1. Vehicle fire

In case of vehicle fire, alert fire department immediately and start extinguishing the fire.

2. Fire-extinguishing

WARNING;

- Never use seawater or any water containing salt.
- Use ABC powder or large quantity of water to extinguish the fire.




	ID No.	Version No.	Version Date.	Page
	HAW-ENRS-EN02	02	8/2020	3/4



Mitsubishi i-MiEV



	i-MiEV Body type: Station wagon Type: HA3W, HA4V, HA4W Model year: 2016 – 2020		
	7. In case of submersion		

Submerged Vehicle

- If the vehicle is submerged or partially submerged, first pull the occupants out of the vehicle and water.
- Then shut down the high voltage system. (Refer to 3.-2. How to disconnect the “Power unit control” fuse and 3.-4. How to shut down High voltage (pull out the service plug))
- If the vehicle is submerged, the drive battery may generate flammable hydrogen gas.
- If the vehicle is submerged, water may enter the drive battery.



8. Towing / transportation / storage



How to Transport



9. Important additional information

1. Supplemental Restraint System (SRS)

2. High-voltage component location

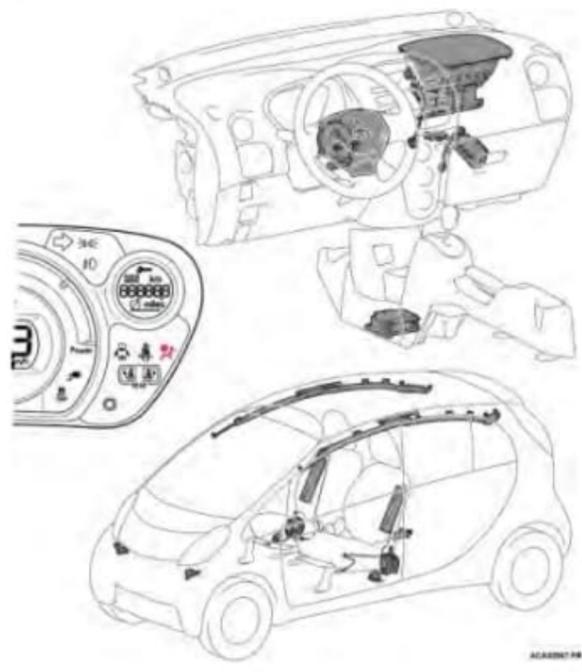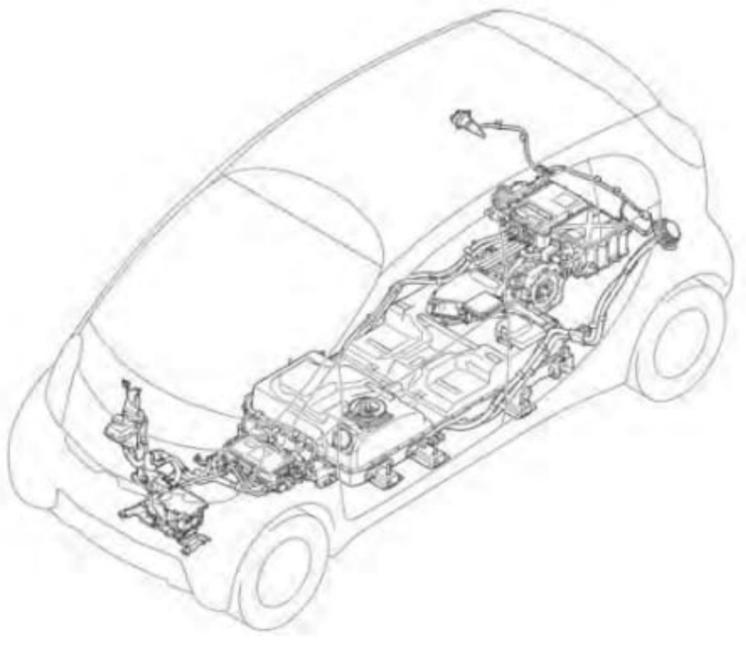 <p>Disconnect the negative auxiliary battery terminal and wait for 1 minutes or more before starting work.</p>	 <p>Disconnect the service plug and wait for 5 minutes or more before starting work.</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

3. Discharge measures for drive battery

For the detail, please refer to Emergency Response Guide.

10. Explanation of pictograms used

	Bonnet		Flammable		Explosive		General warning sign
	Boot		Hazardous to the human health		Corrosives		Warning, Electricity
	Lifting point; central support		Use ABC powder to extinguish the fire		Use water to extinguish the fire		

	ID No.	Version No.	Version Date.	Page
	HAW-ENRS-EN02	02	8/2020	4/4