



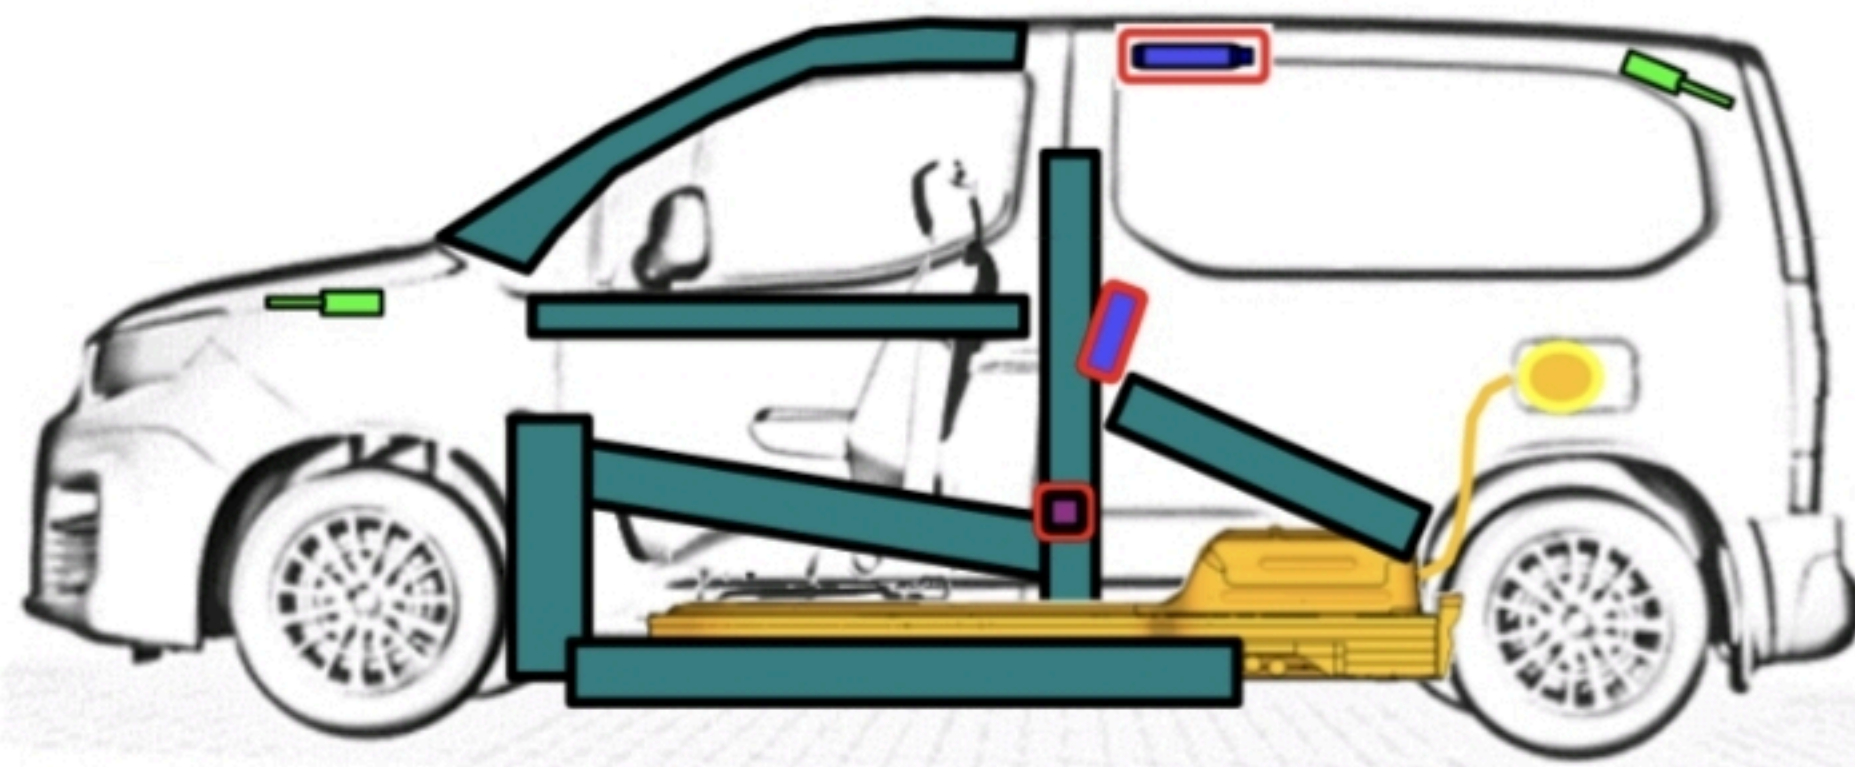

PROACE CITY VERSO EV 2021

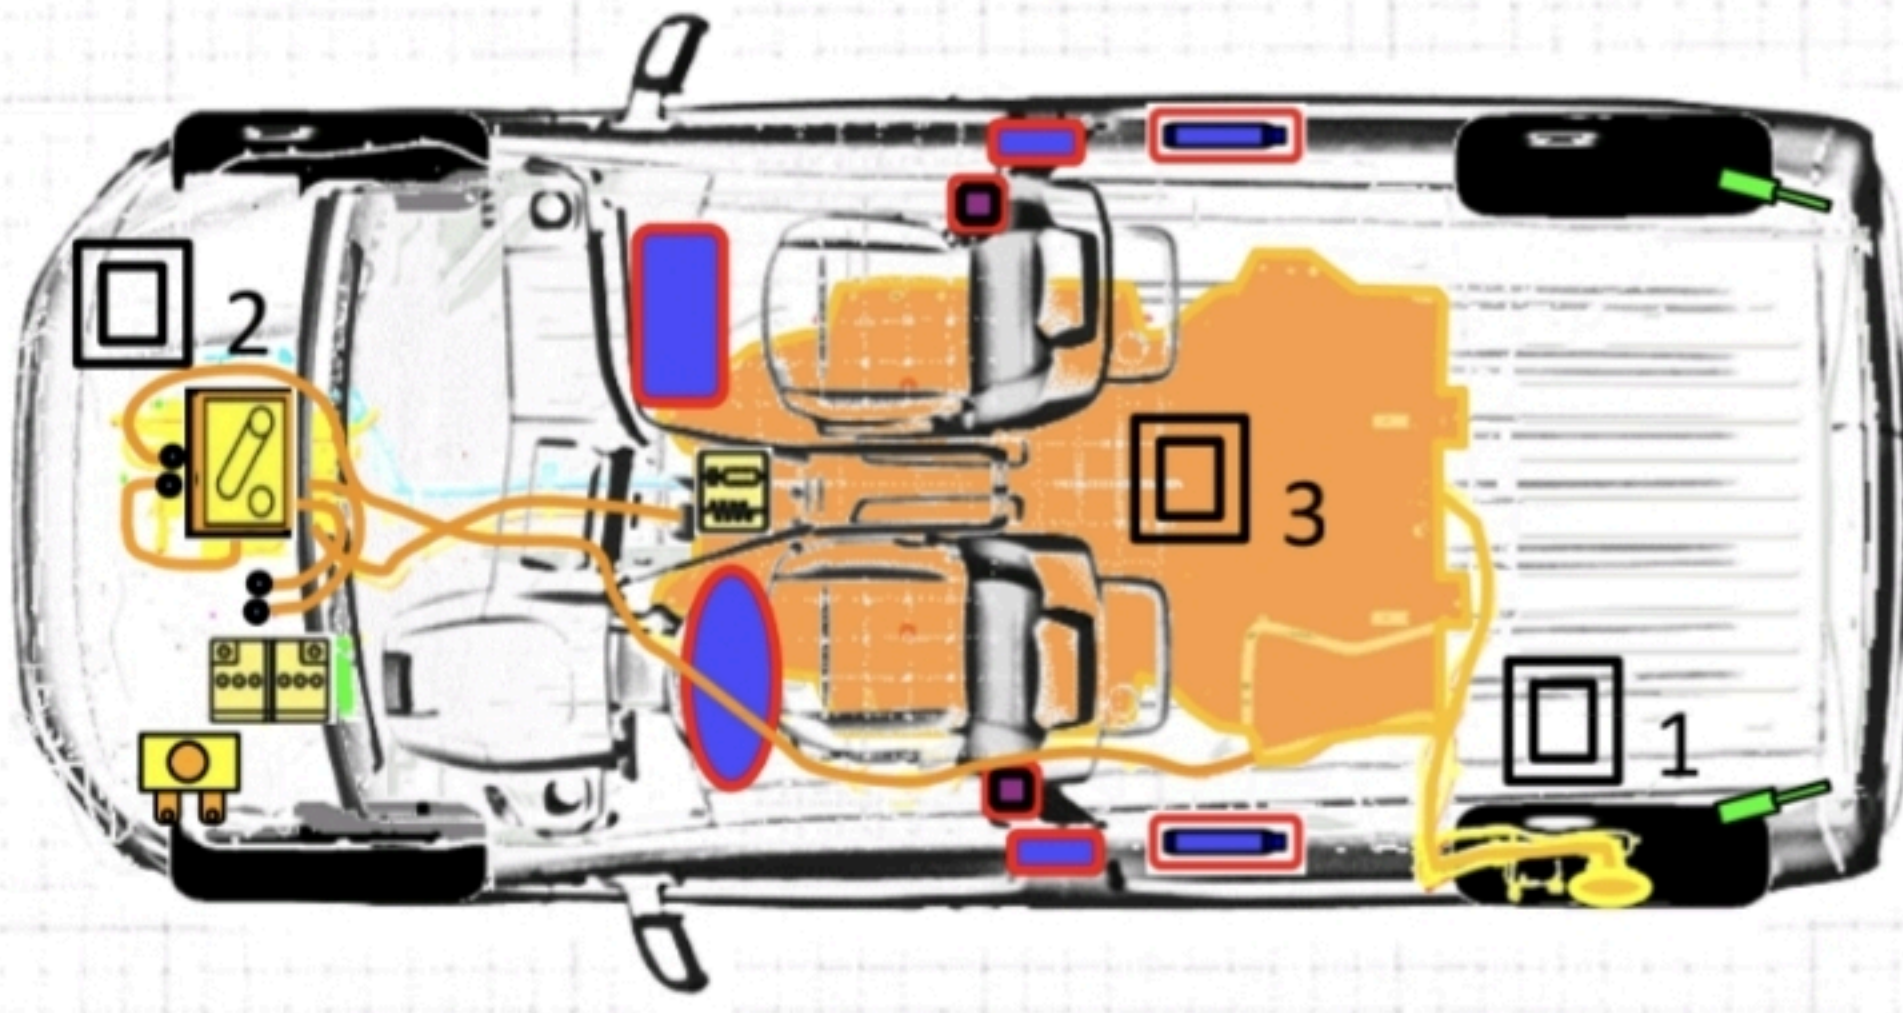

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/ component		Disconnect high voltage		Fuse box disabling high voltage system		Ultra capacitor, high voltage

PROACE CITY VERSO EV 2021




50kW Li-ion Battery



Electrical wires 220 - 400V



Capacity indicator

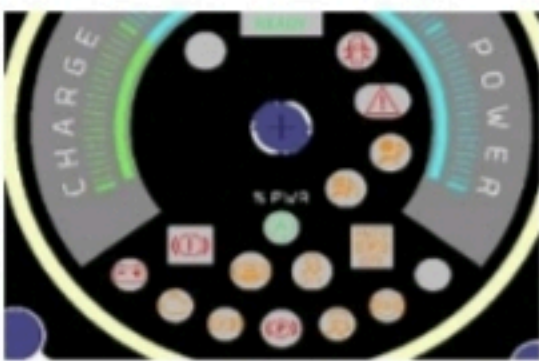

Energy Flux
Loading Level
& remaining
autonomy

eService Plug


= High Voltage Cut device



Closed



Open

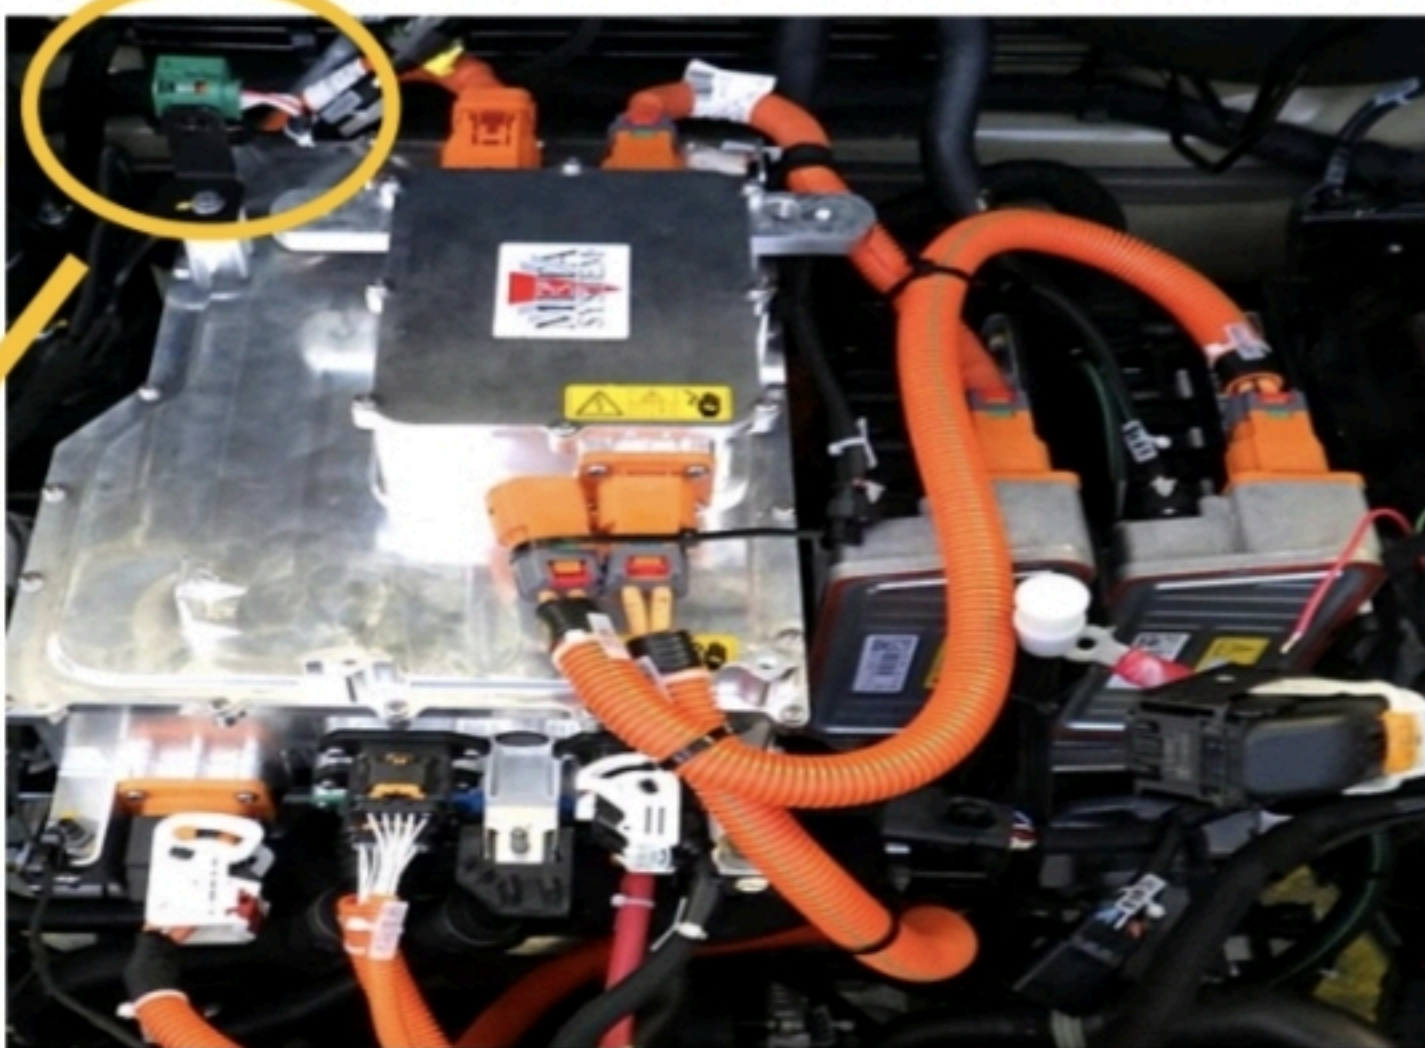

Firemen
only

PROACE CITY VERSO EV
2021



BATTERY CONSIGNATION RULES



1 Use Safety equipments



2 Disconnect the eService PLUG



3 Lock the eService PLUG
(with a padlock)



4 Disconnect the positive ring
from the 12V
battery
(and
wait 2
minutes)



5 Lock the positive ring in a
safety bag and put a sticker



6 Disconnect the 3 power
connectors from the HV
battery

