
















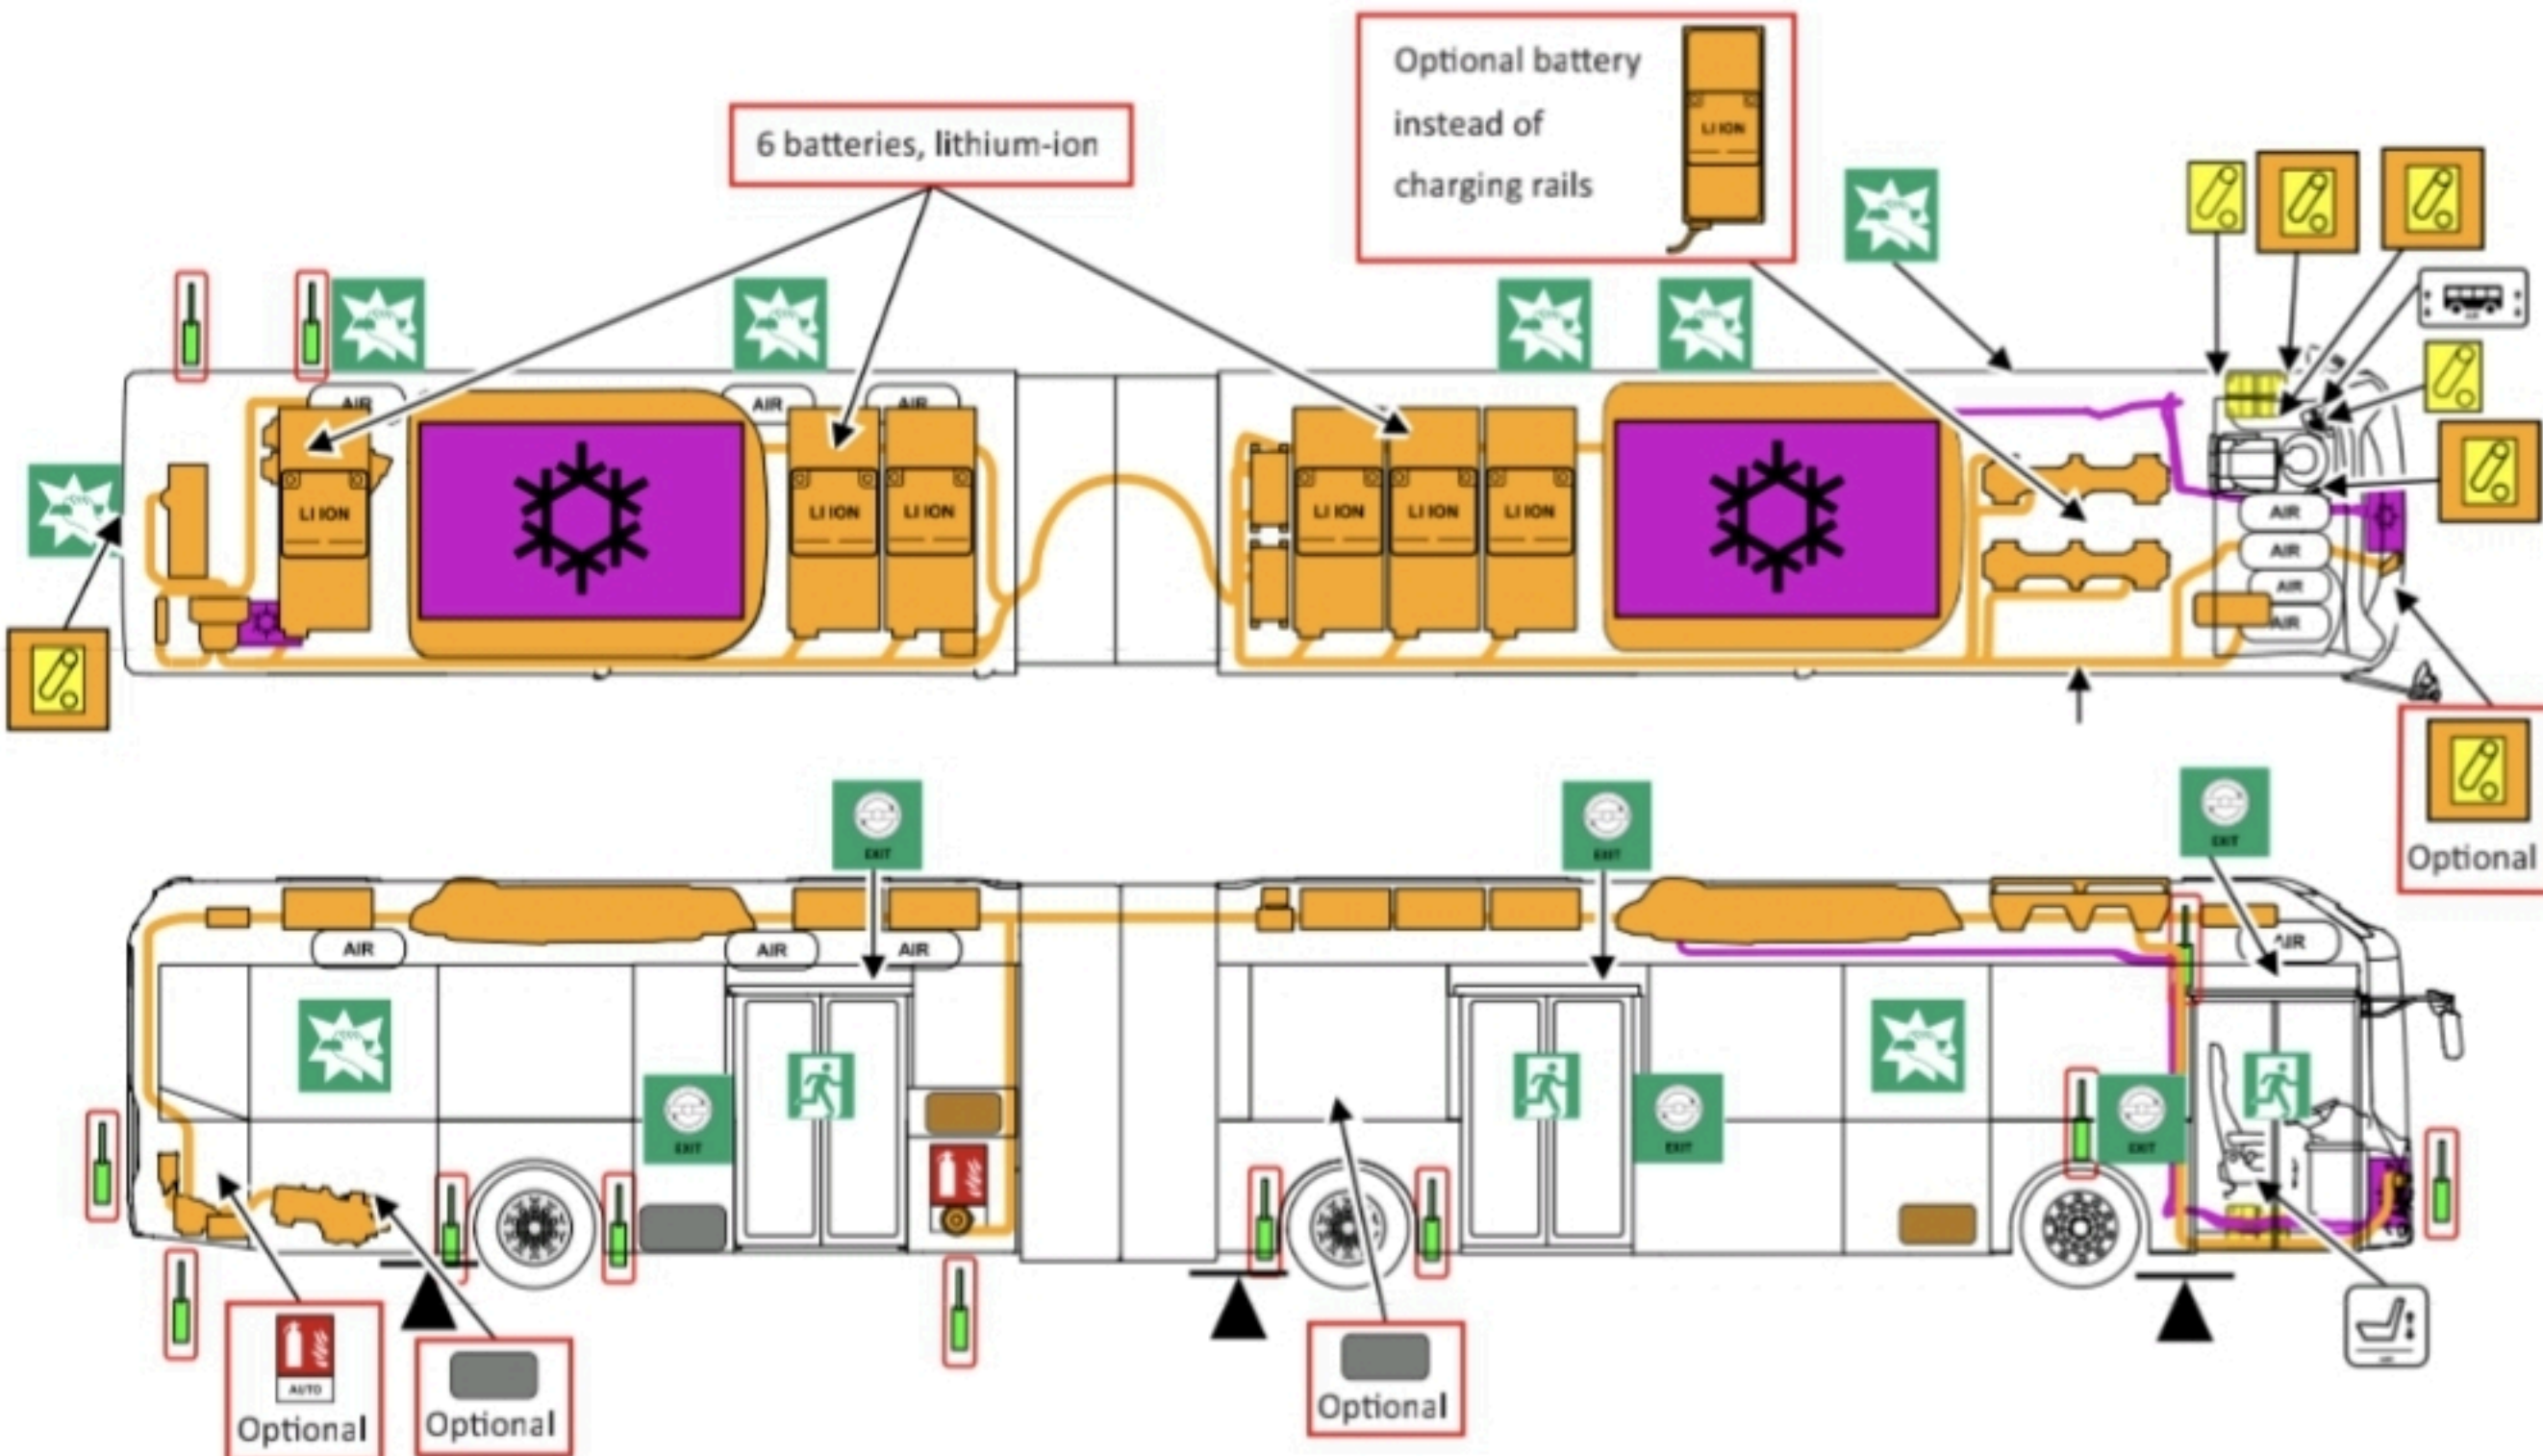





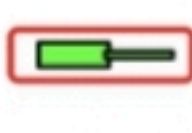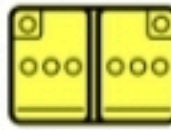




<div>VOLVO</div>	<div>Volvo Buses, 7900 Electric Articulated</div> <div>Body type: Low floor 18.7m, 3-doors</div> <div>Production start: 2020</div>	<div></div>	<div></div>			
<div></div>						
<div></div>						
<div></div> <div>Electric propulsion</div>	<div></div> <div>Traction voltage battery (600 V), lithium-ion</div>	<div></div> <div>Traction voltage component</div>	<div></div> <div>Traction voltage power cable</div>	<div></div> <div>Disconnect traction voltage</div>	<div></div> <div>Device to shut down power in vehicle</div>	<div></div> <div>Triggered gas strut, triggered preloaded spring</div>
<div></div> <div>Low voltage battery</div>	<div></div> <div>Break to obtain access</div>	<div></div> <div>Emergency door opener</div>	<div></div> <div>Emergency exit</div>	<div></div> <div>Height control</div>	<div></div> <div>Seat adjustment</div>	<div></div> <div>Lifting point</div>
<div></div> <div>Tank content: oil</div>	<div></div> <div>Fuel tank content: diesel or biodiesel</div>	<div></div> <div>Auto fire suppression</div>	<div></div> <div>Air-conditioning component</div>	<div></div> <div>Air-conditioning line</div>	<div></div> <div>Air tank</div>	
				Identification number	Version number	Page number
				002187310	2/2022	1

1. Identification / recognition


Electric bus with conductive charging

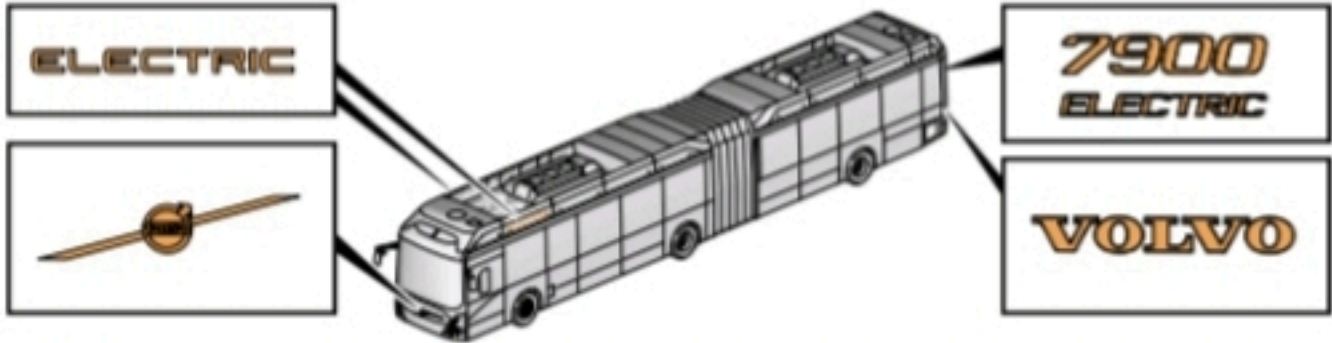


2. Immobilisation / stabilisation / lifting

I. Immobilise the vehicle


- 1. Chock the wheels.
- 2. Apply the parking brake.
- 3. Select the N (neutral) position.

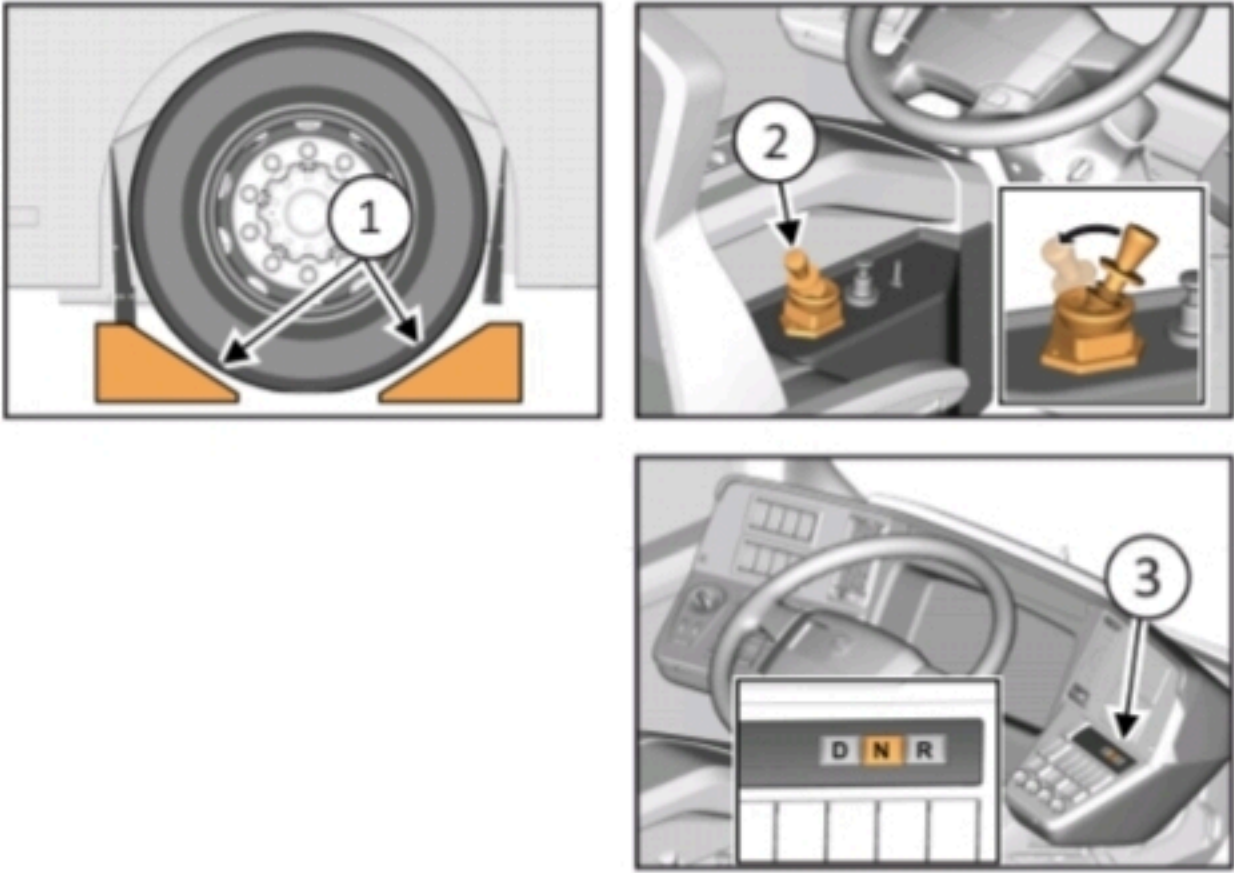


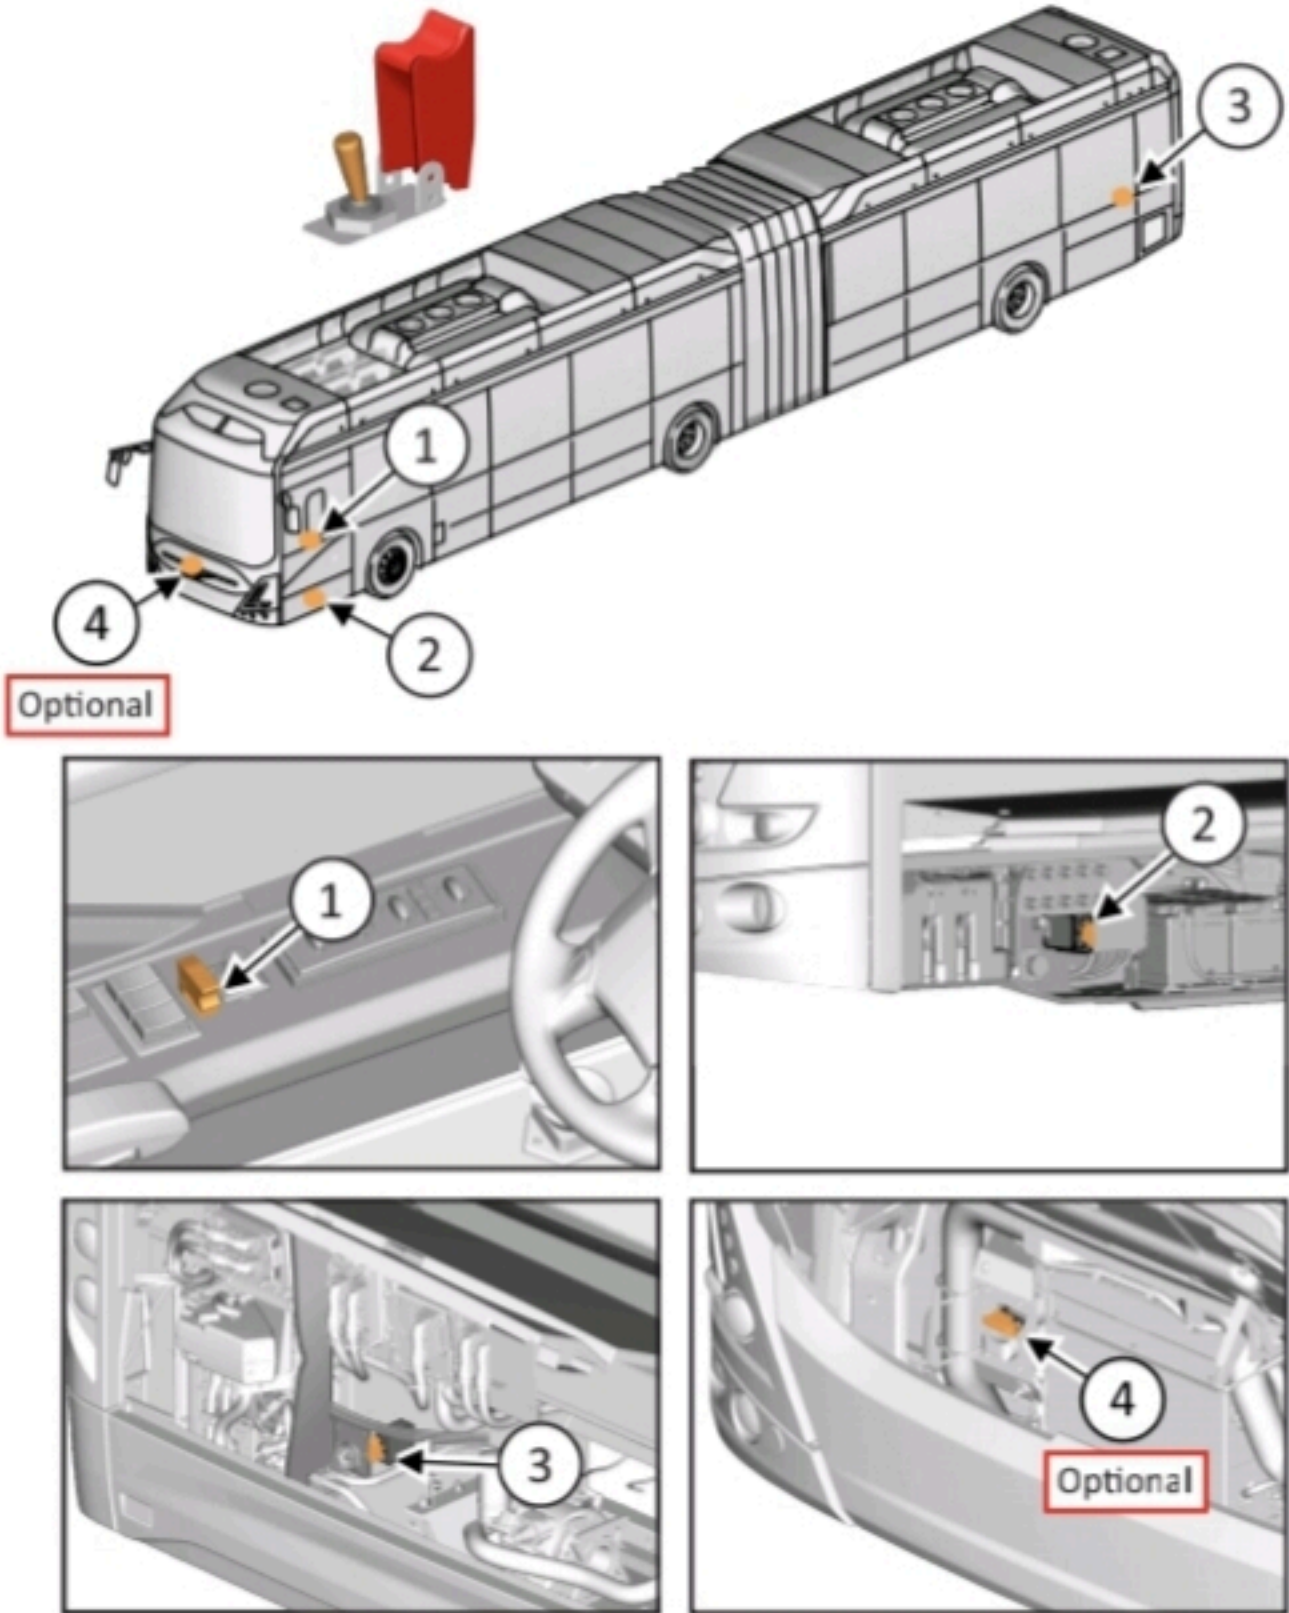
II. Lifting points

 Use only these lifting points (see page 1).

3. Disable direct hazards / safety regulations

 **Always assume that the bus is powered, even if it is silent!**
In case of 600 V battery failure, risk of voltage on the traction cables exists, even if the power is off!
Note! Do not touch or cut orange traction voltage power cables. Do not touch or open traction voltage components.
600 V components need 5 seconds to discharge their capacitance.

-  **Location of the emergency switches:**
- 1. Driver compartment.
 - 2. Behind the side hatch, on the left side of the bus.
 - 3. Behind the rear hatch.
 - 4. Behind the front hatch (optional).



	Identification number	Version number	Page number
	002187310	2/2022	2



I. Disabling traction voltage

I.I Emergency method



Variant (A) of the emergency switch

- 1. Lift the flap.
- 2. Press the emergency switch.
Note! Do not close the flap after pressing the switch. Closing the flap causes the switch to reset and reconnect 600 V system.

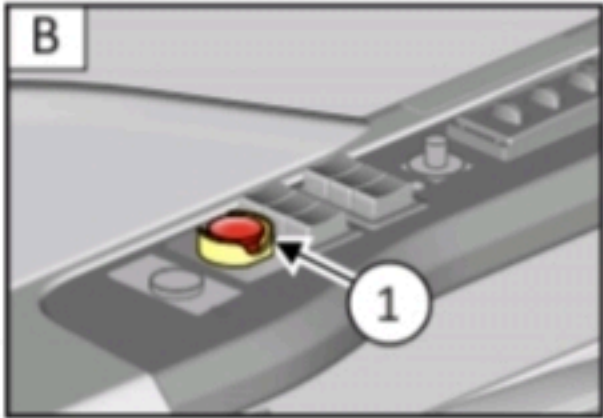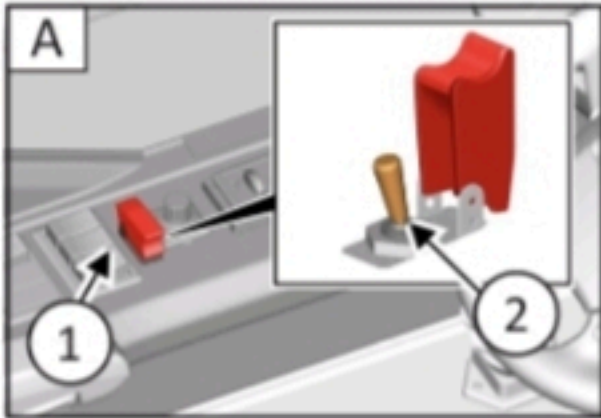

Variant (B) of the emergency switch

- 1. Press the emergency switch.

I.II Alternative method

- Note! Make sure that the bus is not charging.*
- Note! The battery cables can be live even if the switch is in „0" position or the batteries are disconnected.*






- 1. Turn off the ignition.



- 2. Turn off the power.
Note! Wait at least 30 seconds.




- 3. Turn the switch to position „0".
- 4. Remove the battery cables (plus „+" and minus „-").

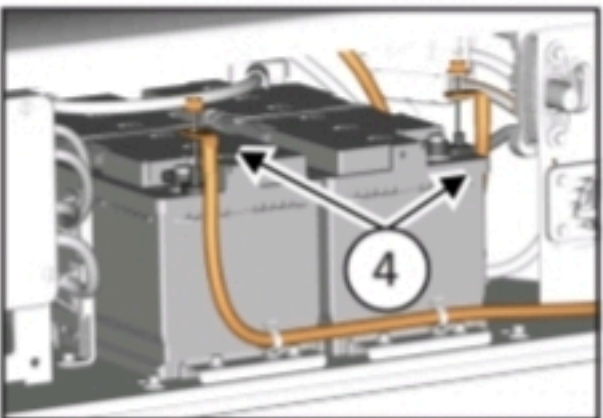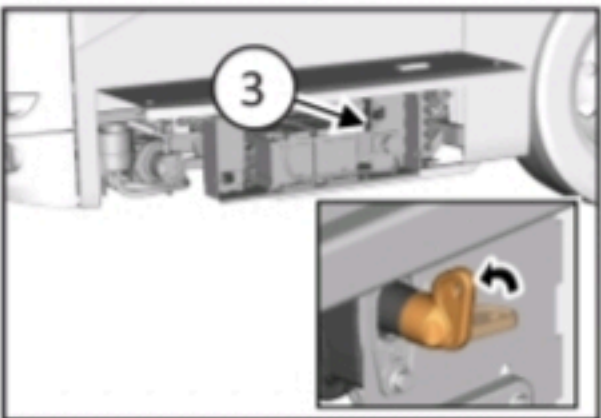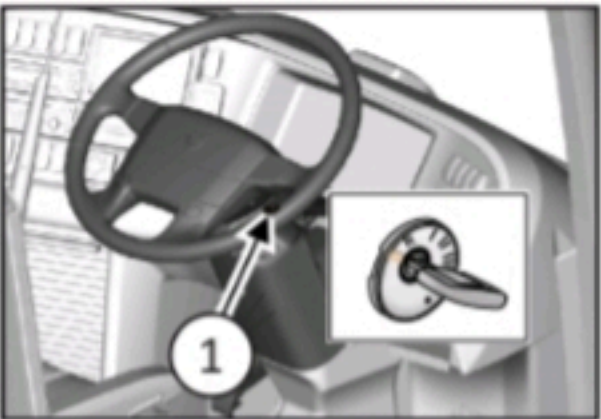

II. Disconnecting the bus from external chargers

II.I If the bus is charged via a charging plug


- 1. Push the button.
- 2. Wait until the LED goes out.
- 3. Remove the charging plug.

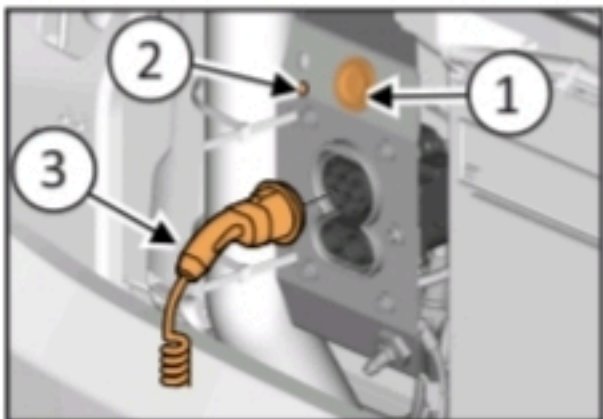

II.II If the bus is charged via a charging rails

Emergency method (A)

- 1. Push the emergency stop button on the pantograph charging pole.
Note! Make sure the pantograph has risen and there is no connection to the charging rails.

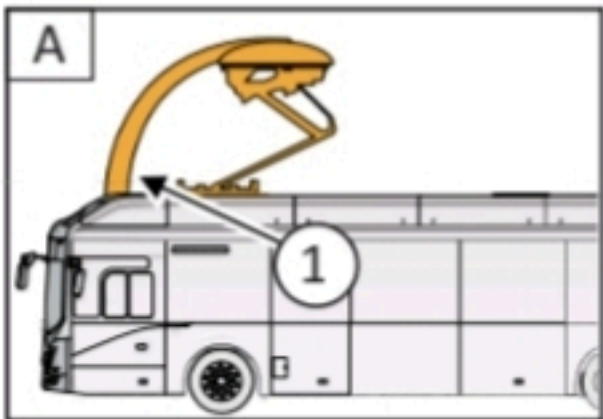


Alternative method (B)


- 1. Release the parking brake.
Note! Make sure the pantograph has risen and there is no connection to the charging rails.




	Identification number	Version number	Page number
	002187310	2/2022	3


4. Access to the occupants

- 

Break these windows to obtain access (tempered glass).
- 

Three emergency door opening buttons inside and outside the vehicle.
- 

Three exits through doors.

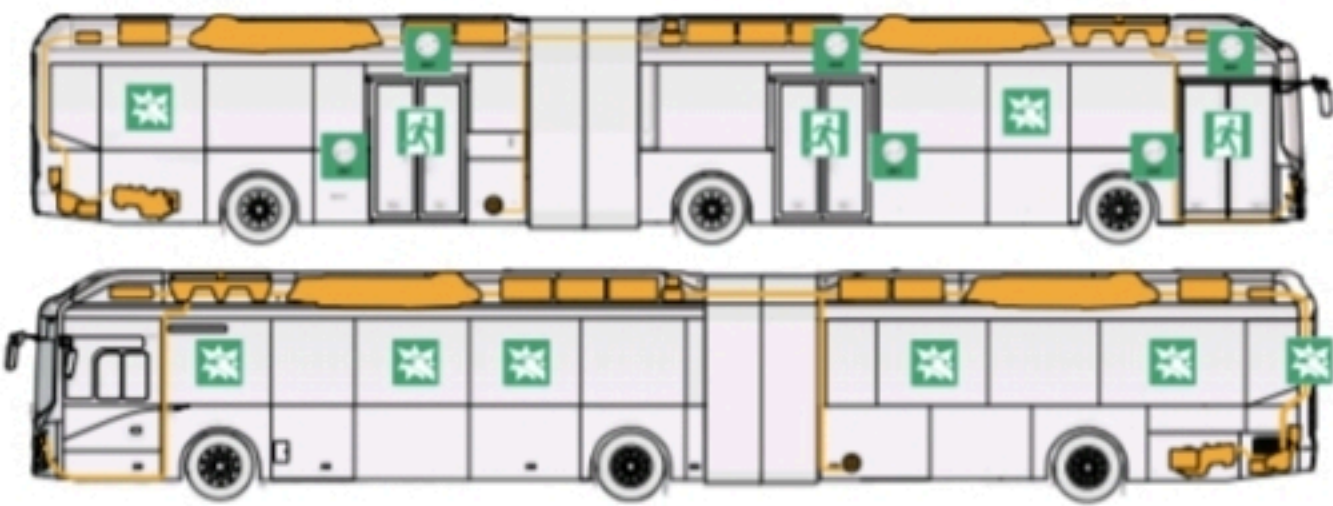

5. Stored energy / liquids / gases / solids

I. 600 V traction voltage lithium-ion battery



II. Other liquids/gases




6. In case of fire



I. Lithium-ion battery related fire

- Symptoms of the battery fire:**
- 1. Fire alarm on a dashboard.
 - 2. Smoke or streaks of intense fire rising from under the traction voltage battery cover.

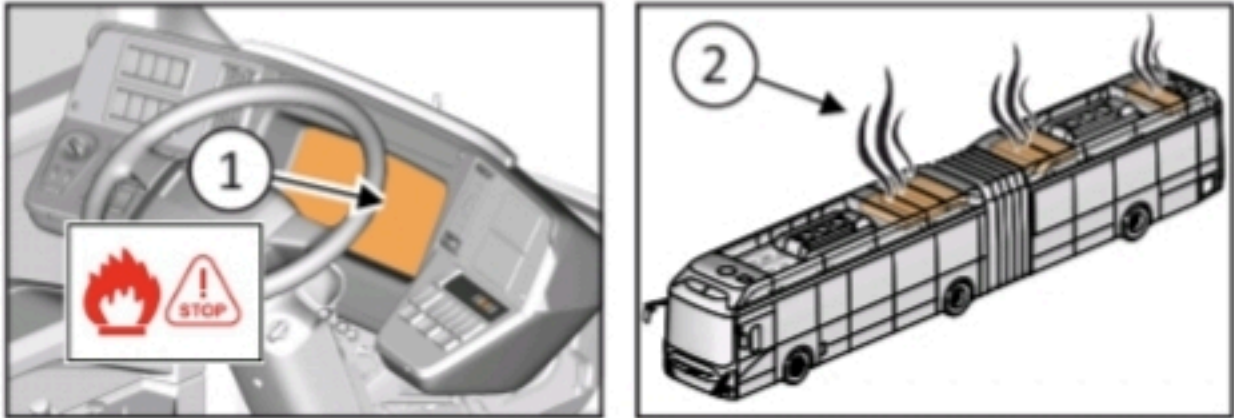



- 


Use large amounts of water to put out the lithium-ion battery related fire.


Note! Pay attention to the overpressure valves (bursting membrane) (A).

Note! If electrolyte comes into contact with water, hydrofluoric acid and hydrogen gas may be formed.


- 

Do not use a class ABC fire extinguisher for the battery related fire! ABC Dry chemical is ineffective.
- 


When fighting the fire with water, any electrical hazards have to be considered and rules have to be respected.
- 


Hydrogen fluoride, carbon monoxide, carbon dioxide can be released. Wear Self Contained Breathing Apparatus (SCBA) and cover your skin.
- 


Risk of battery re-ignition (see chapter 8).

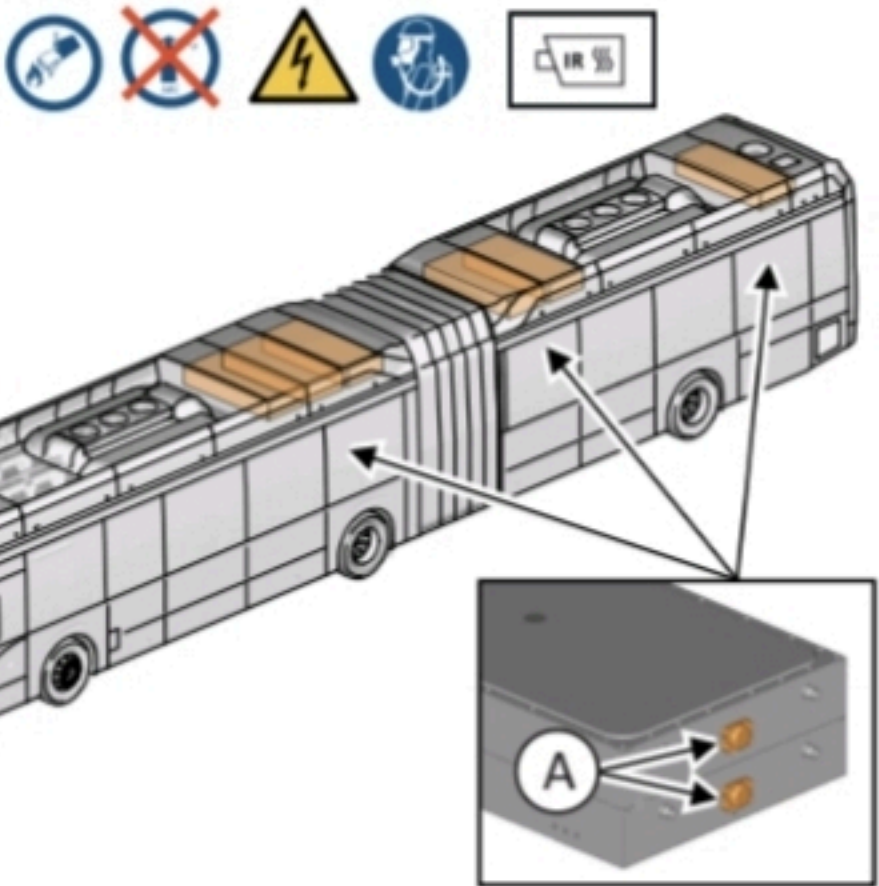


II. Fire related to other material

-  Can only occur in the following compartments:
 - auxiliary heater
 - electric machine (optional)


 If other materials are involved, a class ABC fire extinguisher can be used.

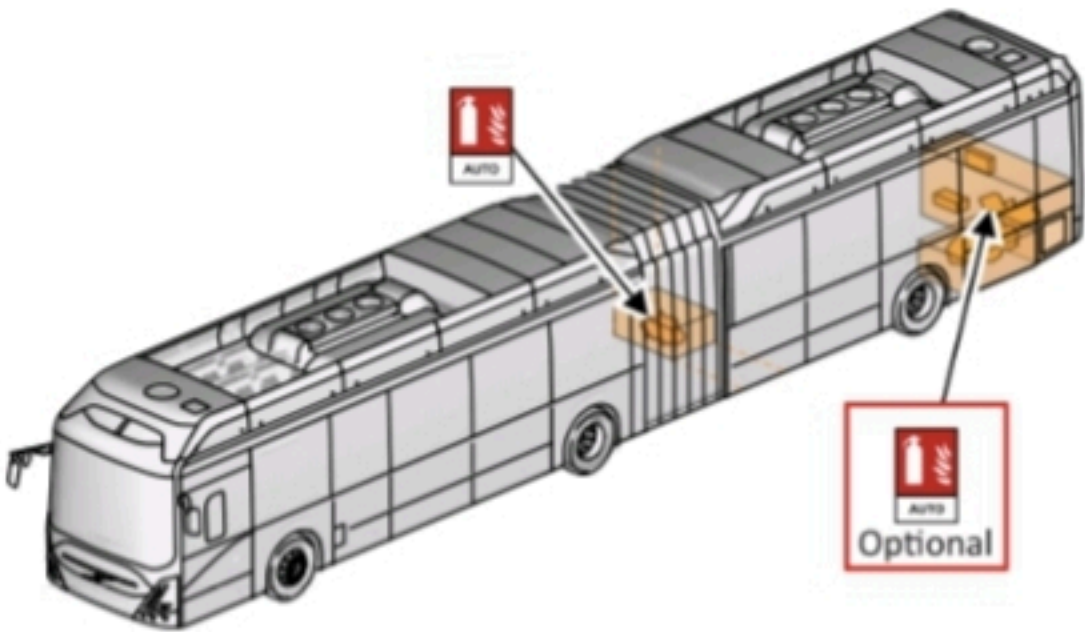

7. In case of submersion

-  If possible:
 1. Remove the vehicle from the water.
 2. Disable direct hazards (see chapter 3).




Note! Risk of traction voltage battery fire after submerged in salt water.

 Risk of serious injury or death from electric shock. Wear appropriate Personal Protective Equipment (PPE).

If electrolyte comes into contact with water, hydrofluoric acid and hydrogen gas may be formed.

8. Towing / transportation / storage

I. Storage post fire/crash

-  Store the bus in a safe distance from other vehicles, buildings and combustible objects.
-  Risk of battery fire re-ignition after incident.
Observe the batteries for at least 48 hours. Toxic and flammable gases can be released.
-  In case of open cells, there is a risk for release of hydrofluoric acid and carbon monoxide.
If severe damage causes exposing of traction voltage components, use PPE including SCBA.


II. Towing

Towing device (A) is located on the front of the bus.
Towing eyes (B) are located on the front and the rear of the bus.
Note! Secure the pin before towing (C).


Allowed methods:

1. Towing.
Note! Use only front towing eye for towing the bus with all wheels on the ground.
2. Lifting and towing.
3. Transporting.

Note! Remove the propeller shaft from the drive axle before towing.

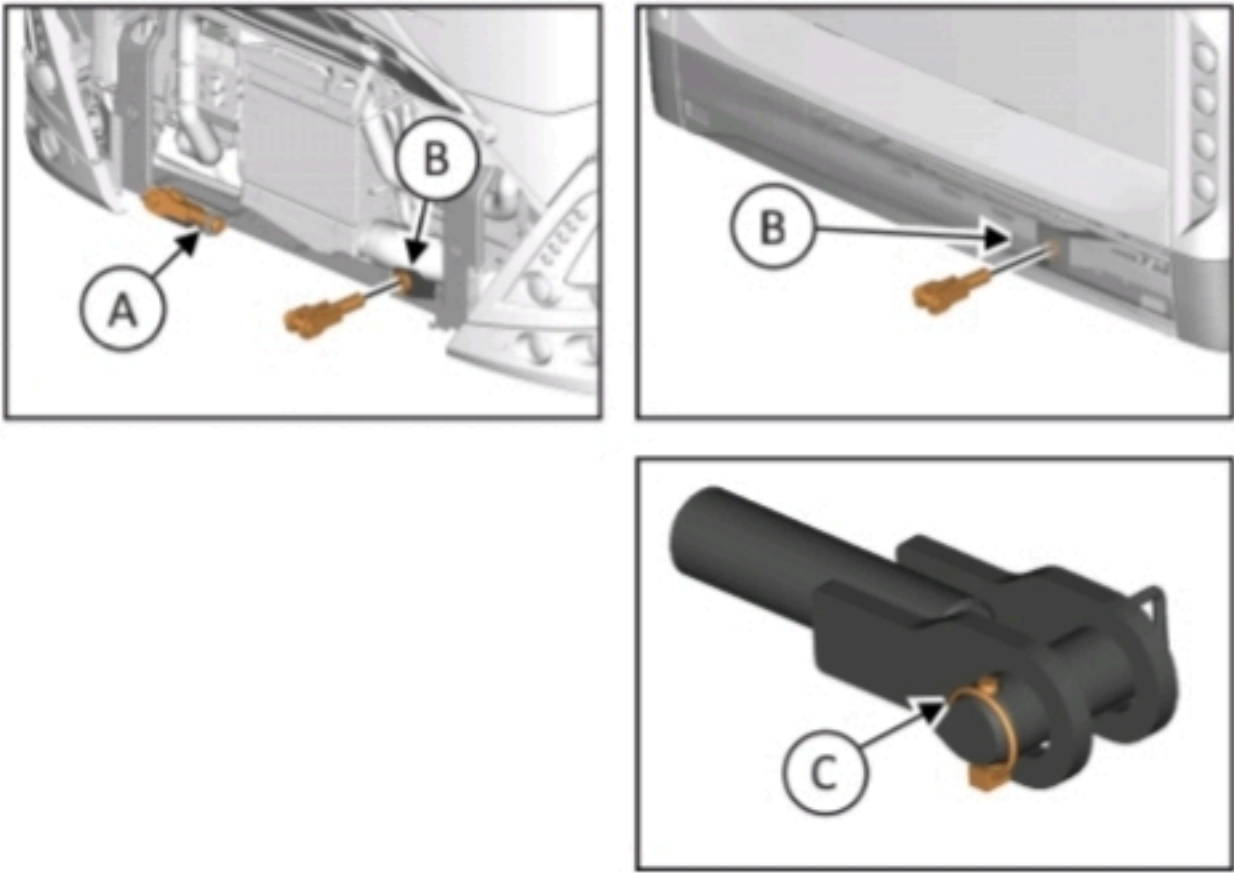

9. Important additional information

-  Do not touch or cut orange traction voltage power cables.
Do not touch or open traction voltage components.
Do not damage the battery pack, even if the propulsion system is deactivated.
Do not step on or press on damaged batteries.
Always use PPE when working on electric vehicle.

	Identification number	Version number	Page number
	002187310	2/2022	5